


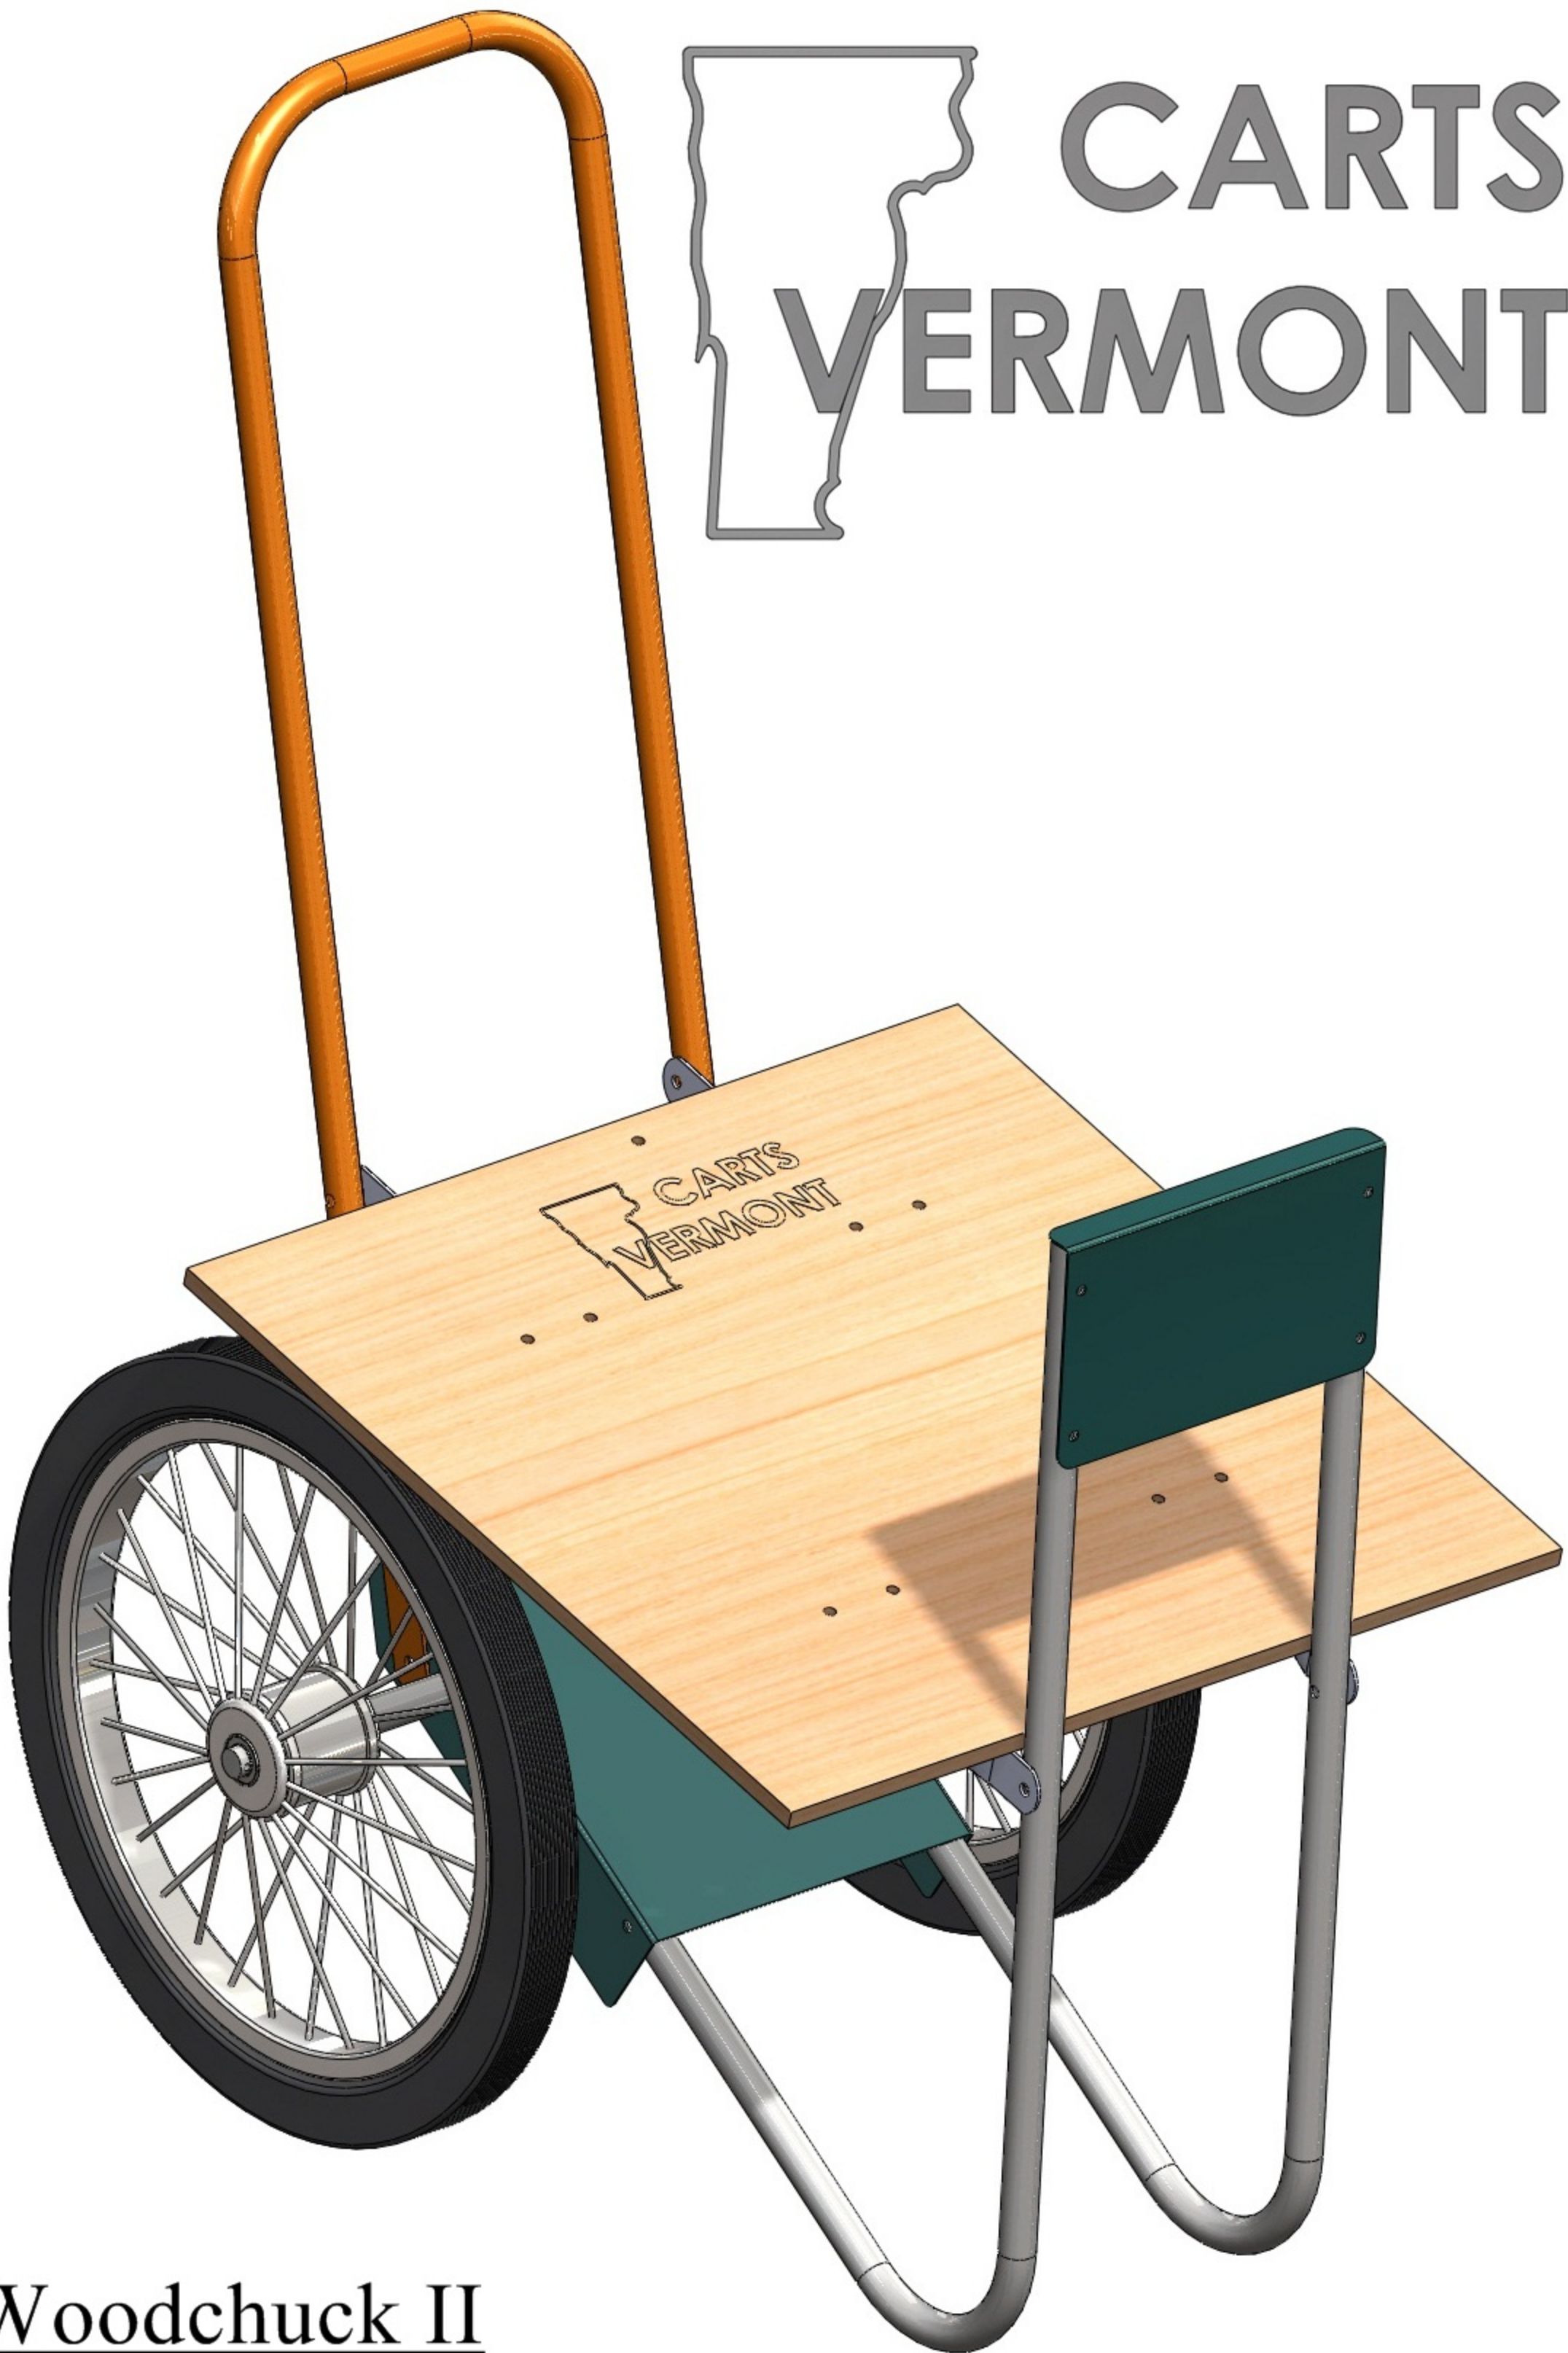














CARTS VERMONT




Woodchuck II

Parts List		
<div> <div>A</div> <div>  <div> 1/2" Bolt 8 pcs </div> </div> </div> <div> <div>A-2</div> <div>  <div> 5/8" Bolt 2 pcs </div> </div> </div>	<div> <div>B</div> <div>  <div> 1 1/2" Bolt 12 pcs. </div> </div> </div>	<div> <div>C</div> <div>  <div> Lock nut 14 pcs. </div> </div> </div>
<div> <div>D</div> <div>  <div> Bracket 4 pcs. </div> </div> </div>	<div> <div>E</div> <div>  <div> Axle Spacer 2 pcs. </div> </div> </div>	<div> <div>F</div> <div>  <div> Cotter Pin 2 pcs. </div> </div> </div>
<div> <div>G</div> <div>  <div> Frame 1 pc. </div> </div> </div>	<div> <div>H</div> <div>  <div> Front Panel 1 pc. </div> </div> </div>	<div> <div>I</div> <div>  <div> Axle 1 pc. </div> </div> </div>
<div> <div>J</div> <div>  <div> Cross Brace 2 pcs. </div> </div> </div>	<div> <div>K</div> <div>  <div> Leg Stand 2 pcs. </div> </div> </div>	<div> <div>L</div> <div>  <div> Handle 1 pc. </div> </div> </div>
<div> <div>M</div> <div>  <div> Wheel 2 pcs. </div> </div> </div>	<div> <div>N</div> <div>  <div> Pellet Pallet 1 pc. *Pre-assembled </div> </div> </div>	<div> <div>Tools Required:</div> <div> *Phillips Head Screwdriver *7/16" Wrench *Note, Leave all screws and assembly nuts loose until final assembly </div> </div>


Visual Assembly Instructions

1

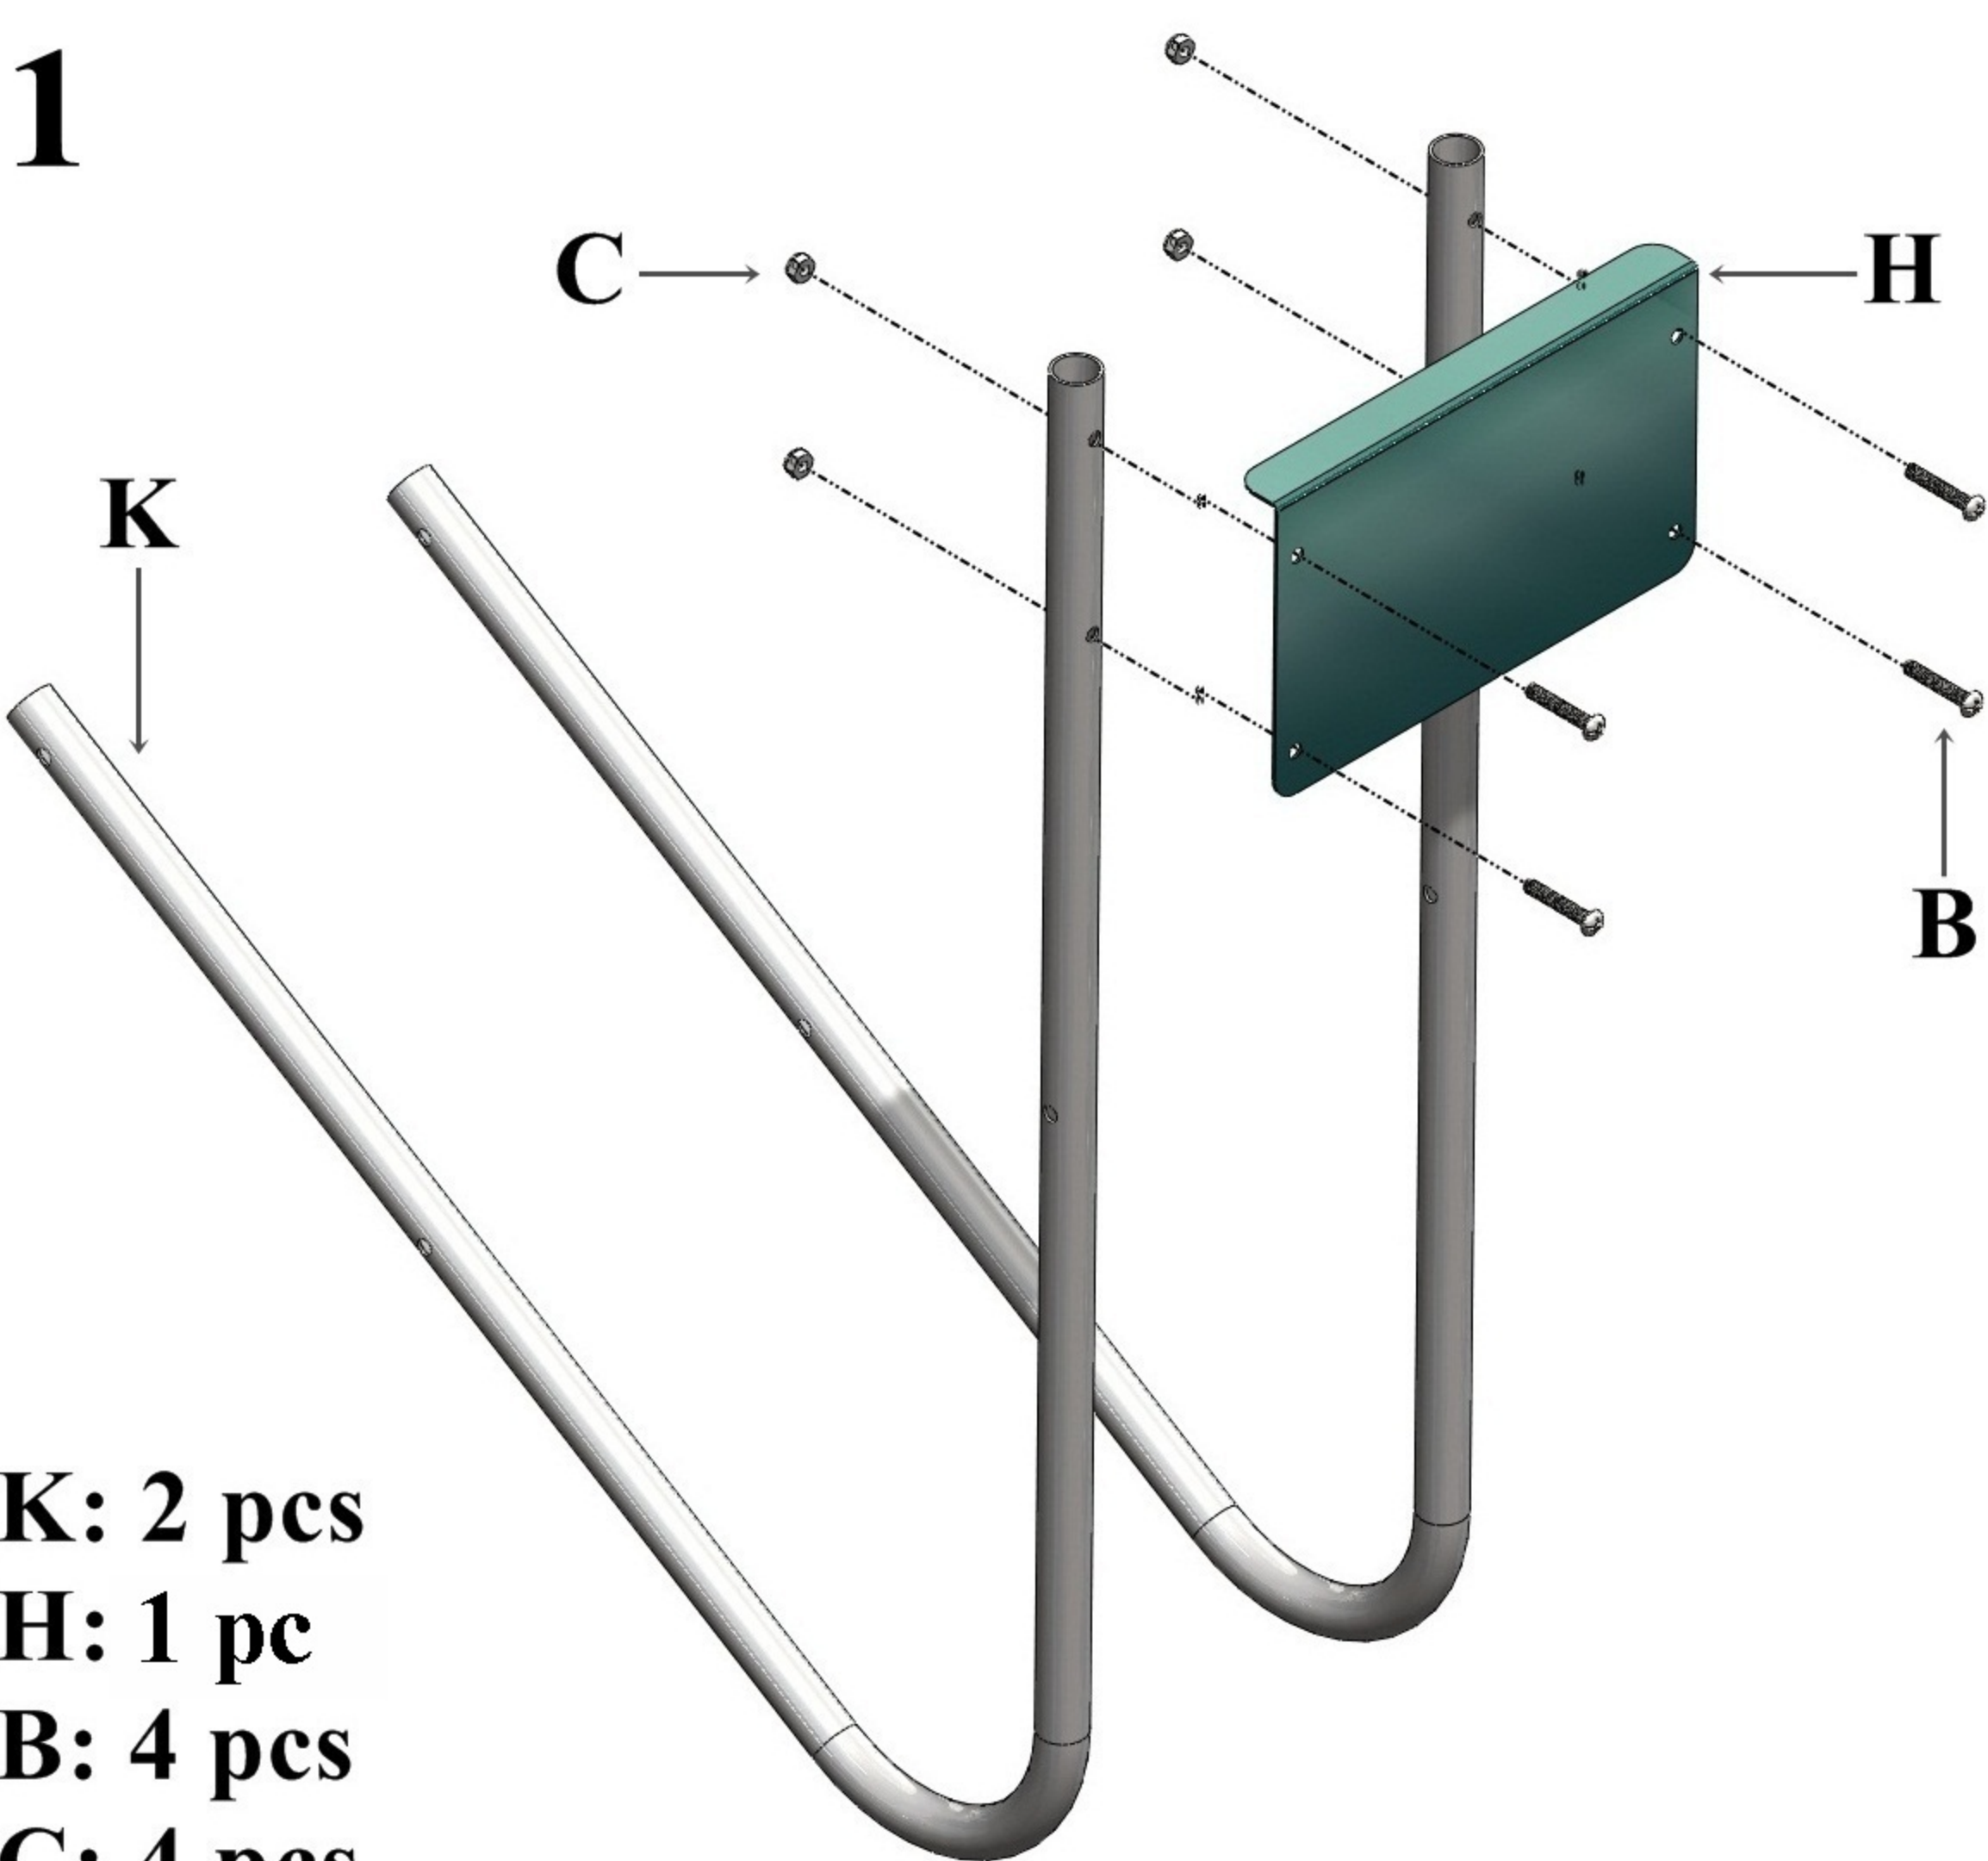


K: 2 pcs
H: 1 pc
B: 4 pcs
C: 4 pcs

2

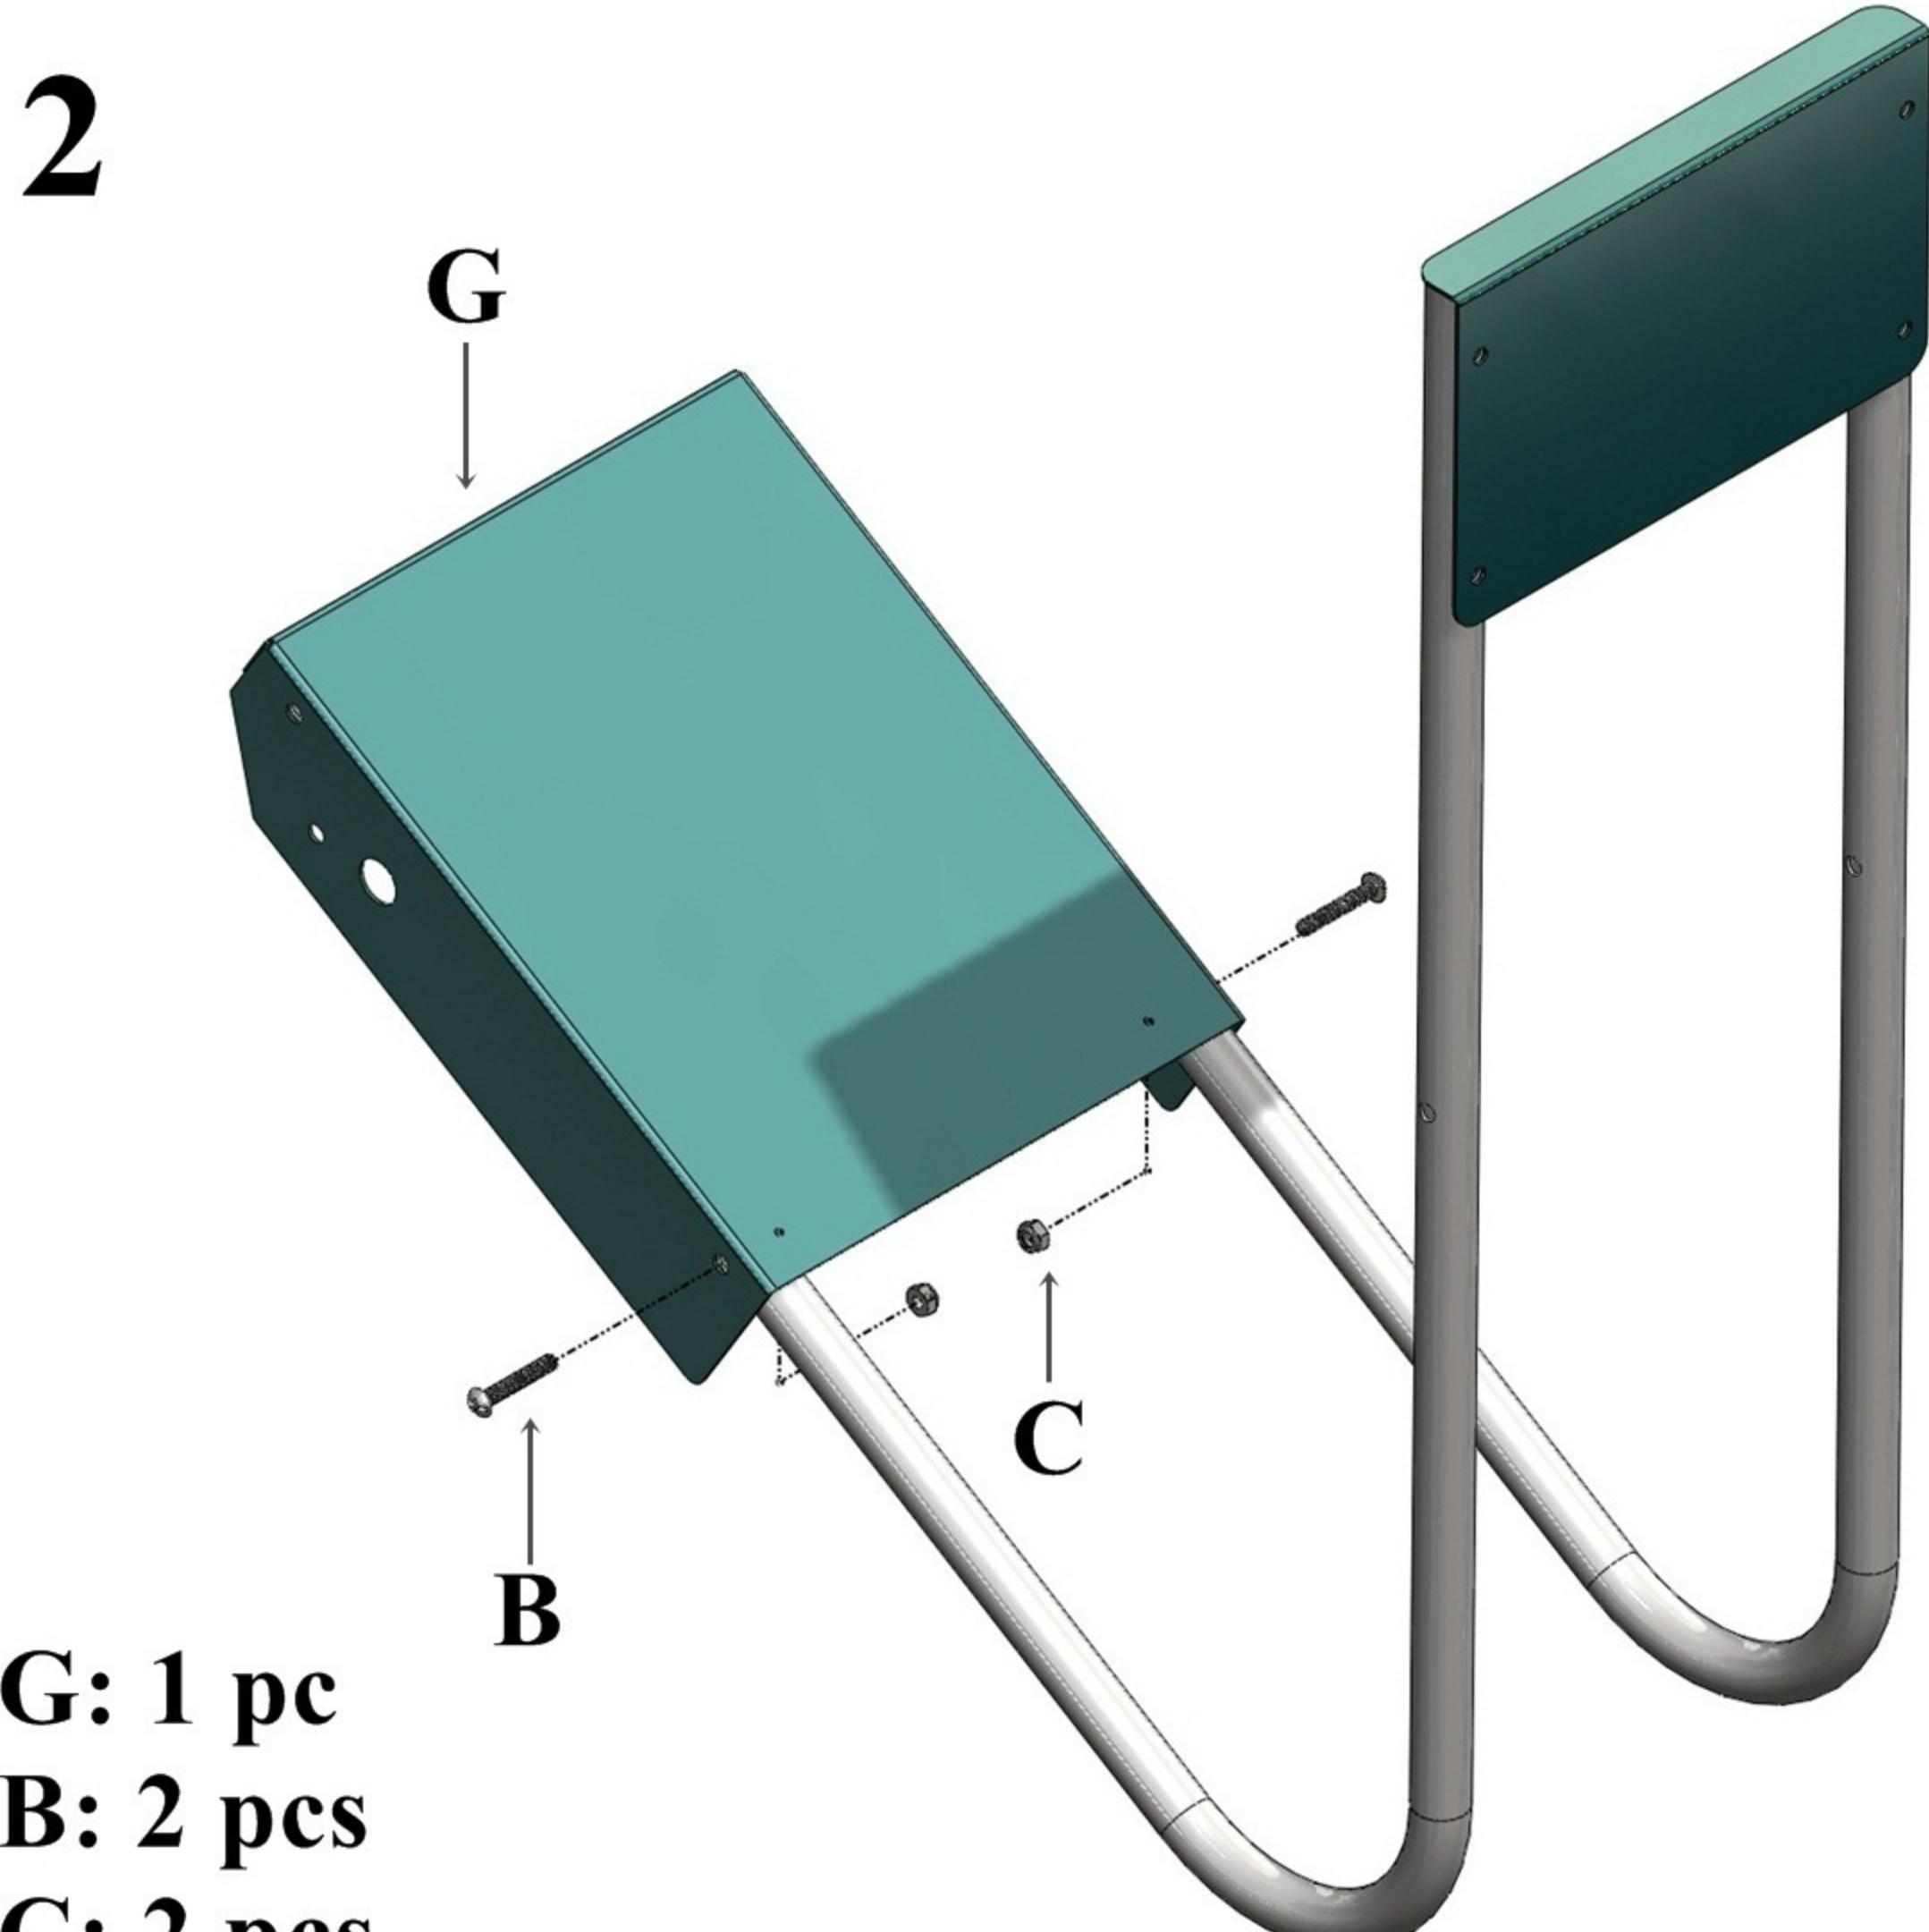


G: 1 pc
B: 2 pcs
C: 2 pcs

3

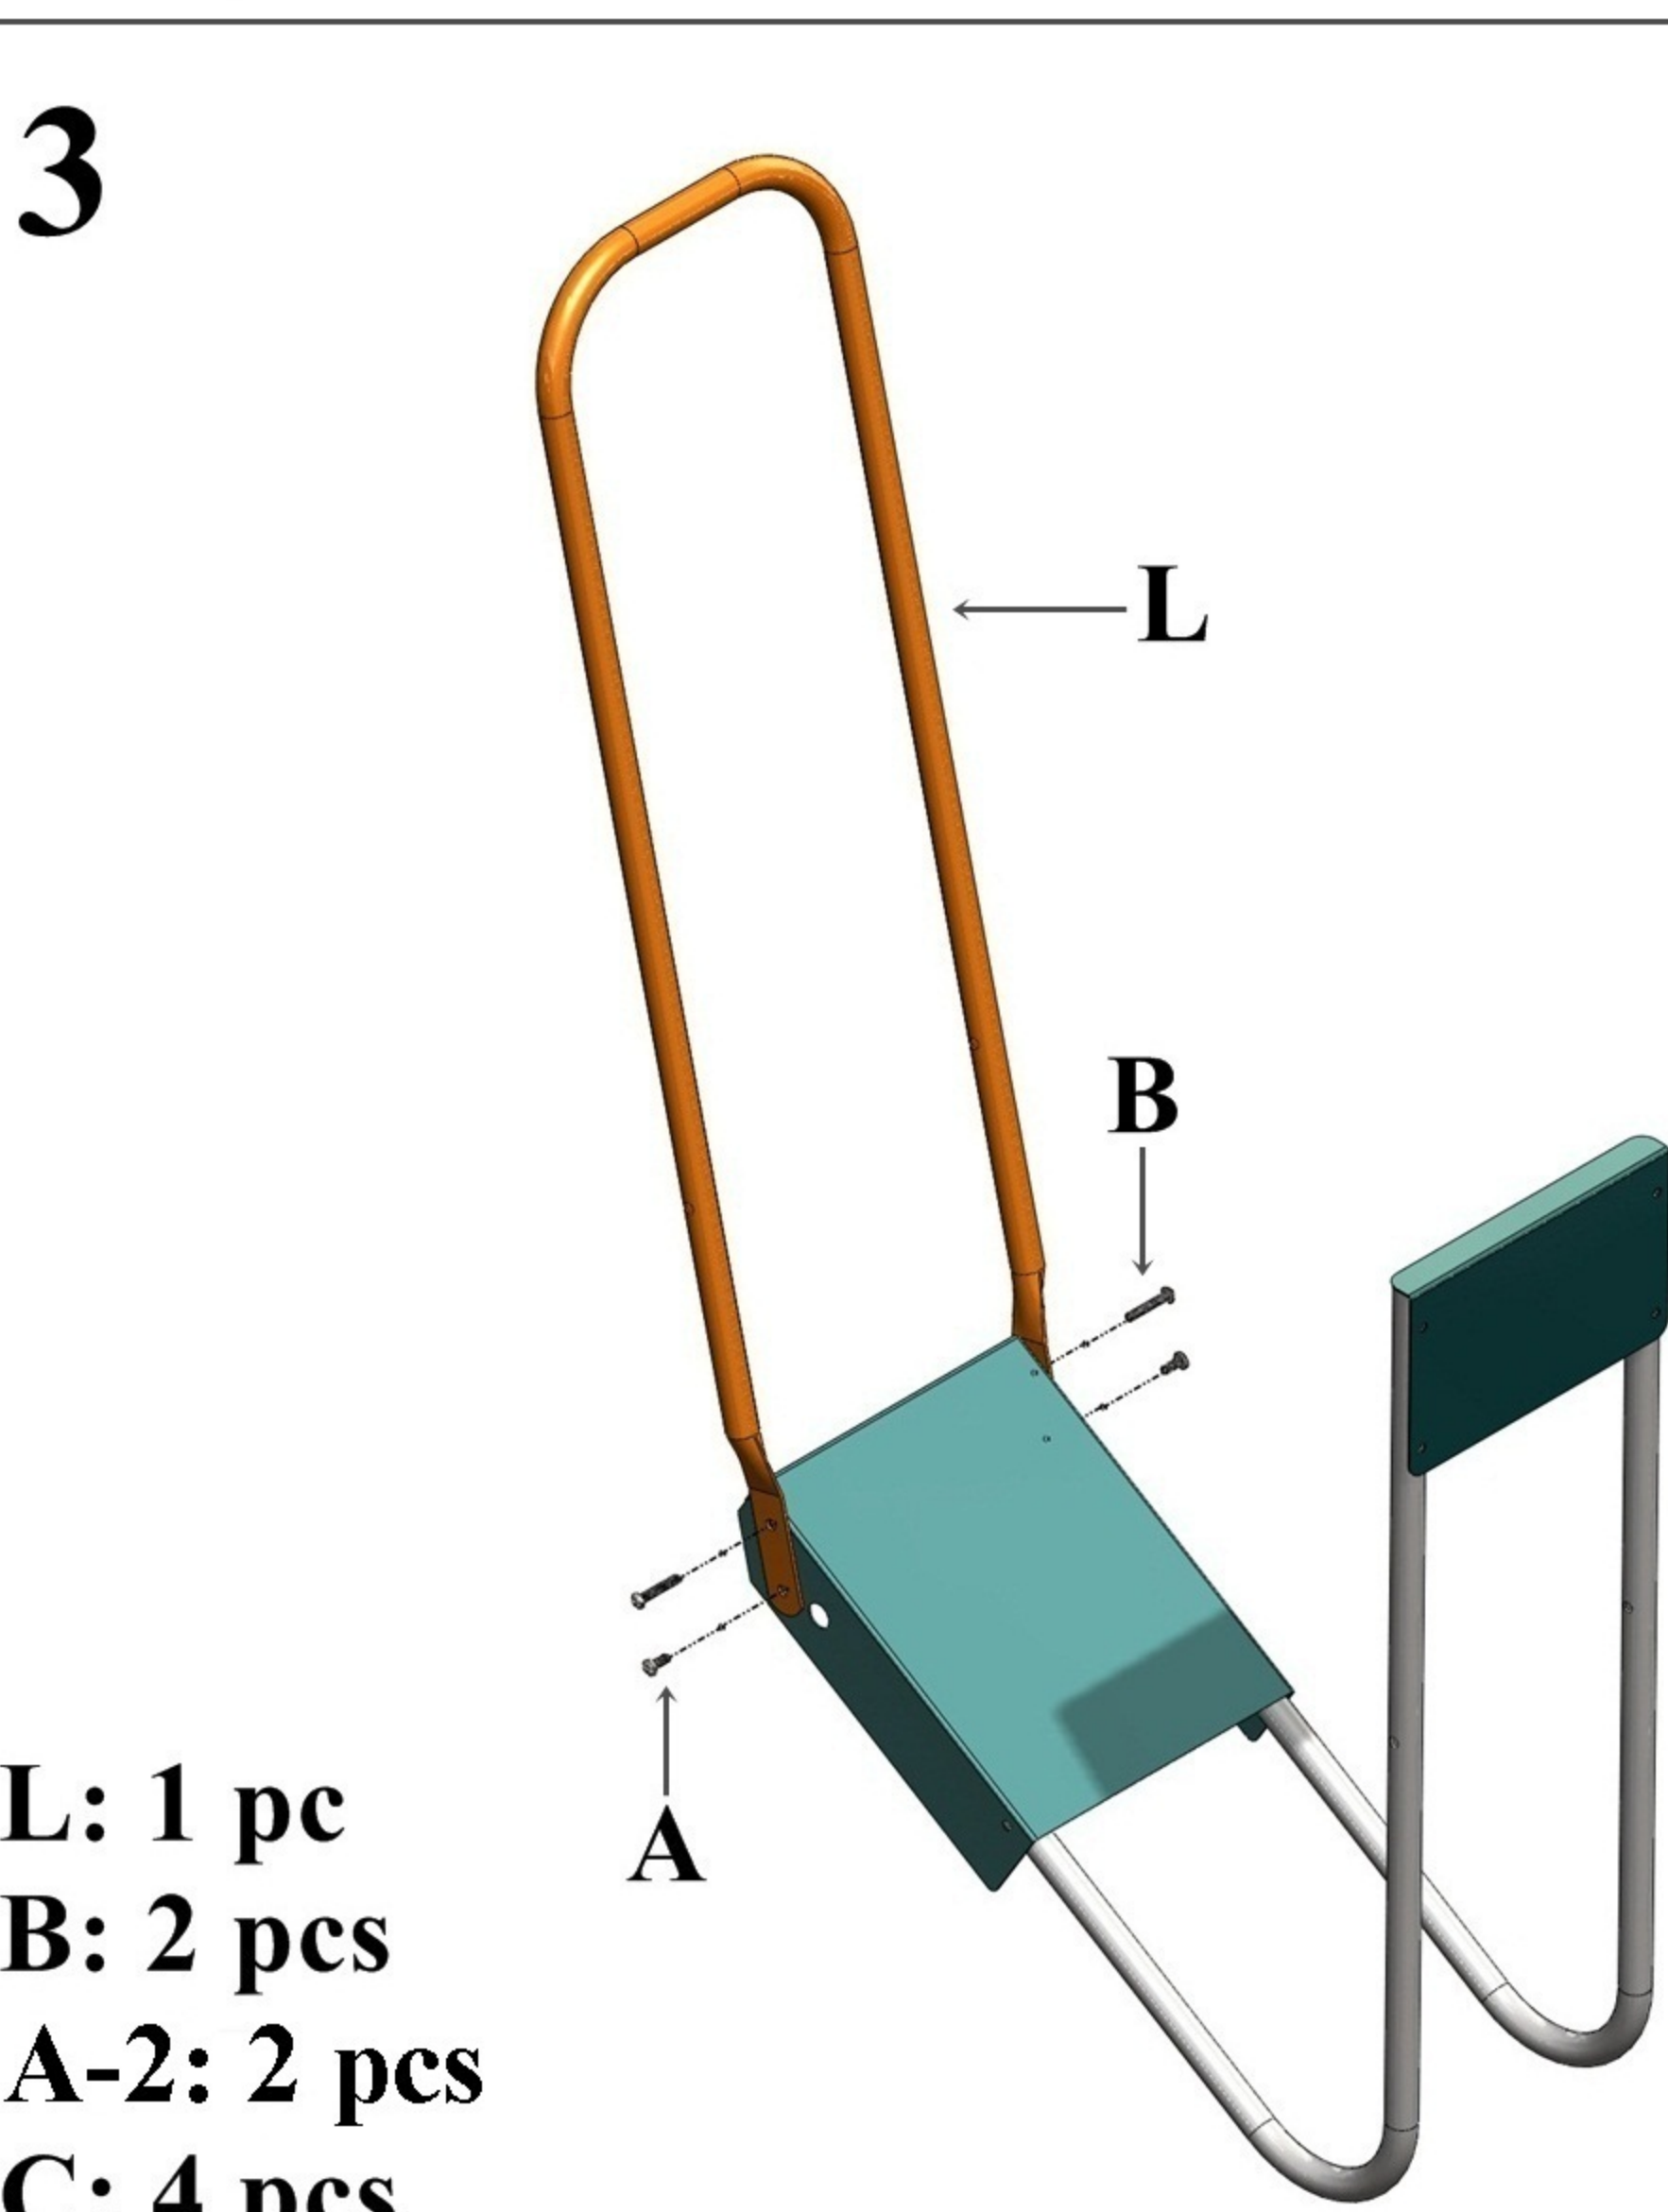


L: 1 pc
B: 2 pcs
A-2: 2 pcs
C: 4 pcs

4

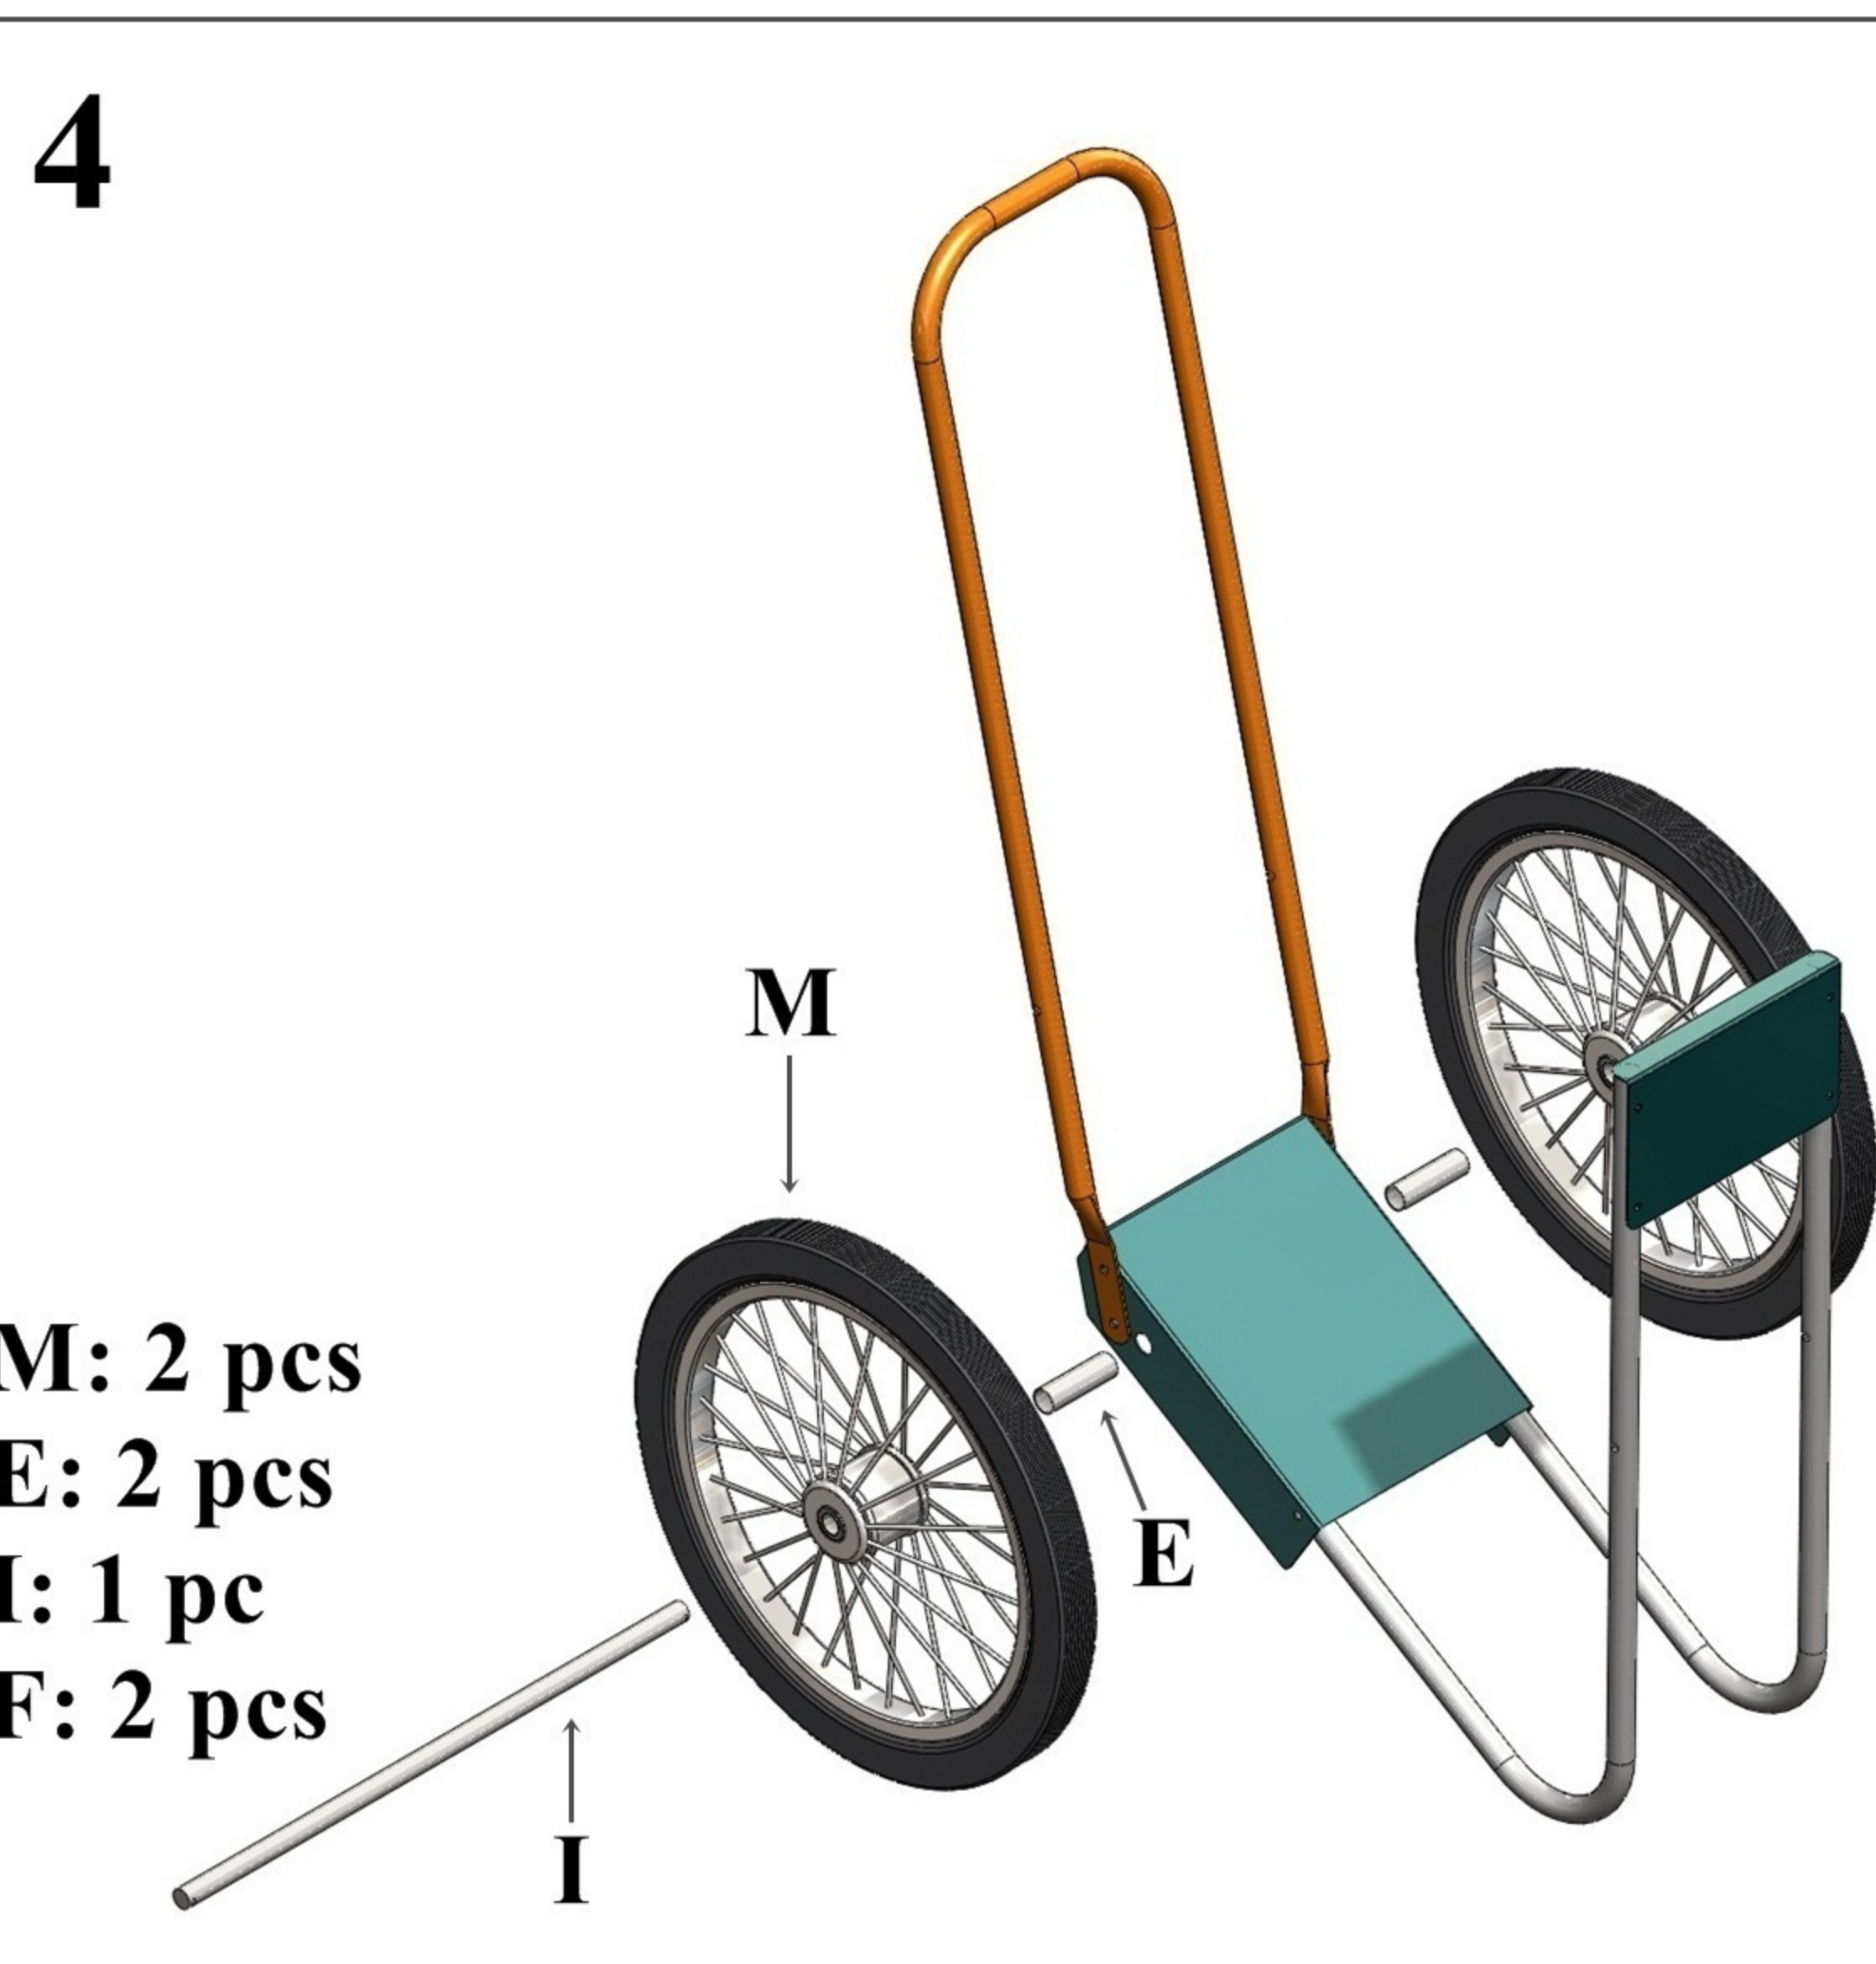

M: 2 pcs
E: 2 pcs
I: 1 pc
F: 2 pcs


5

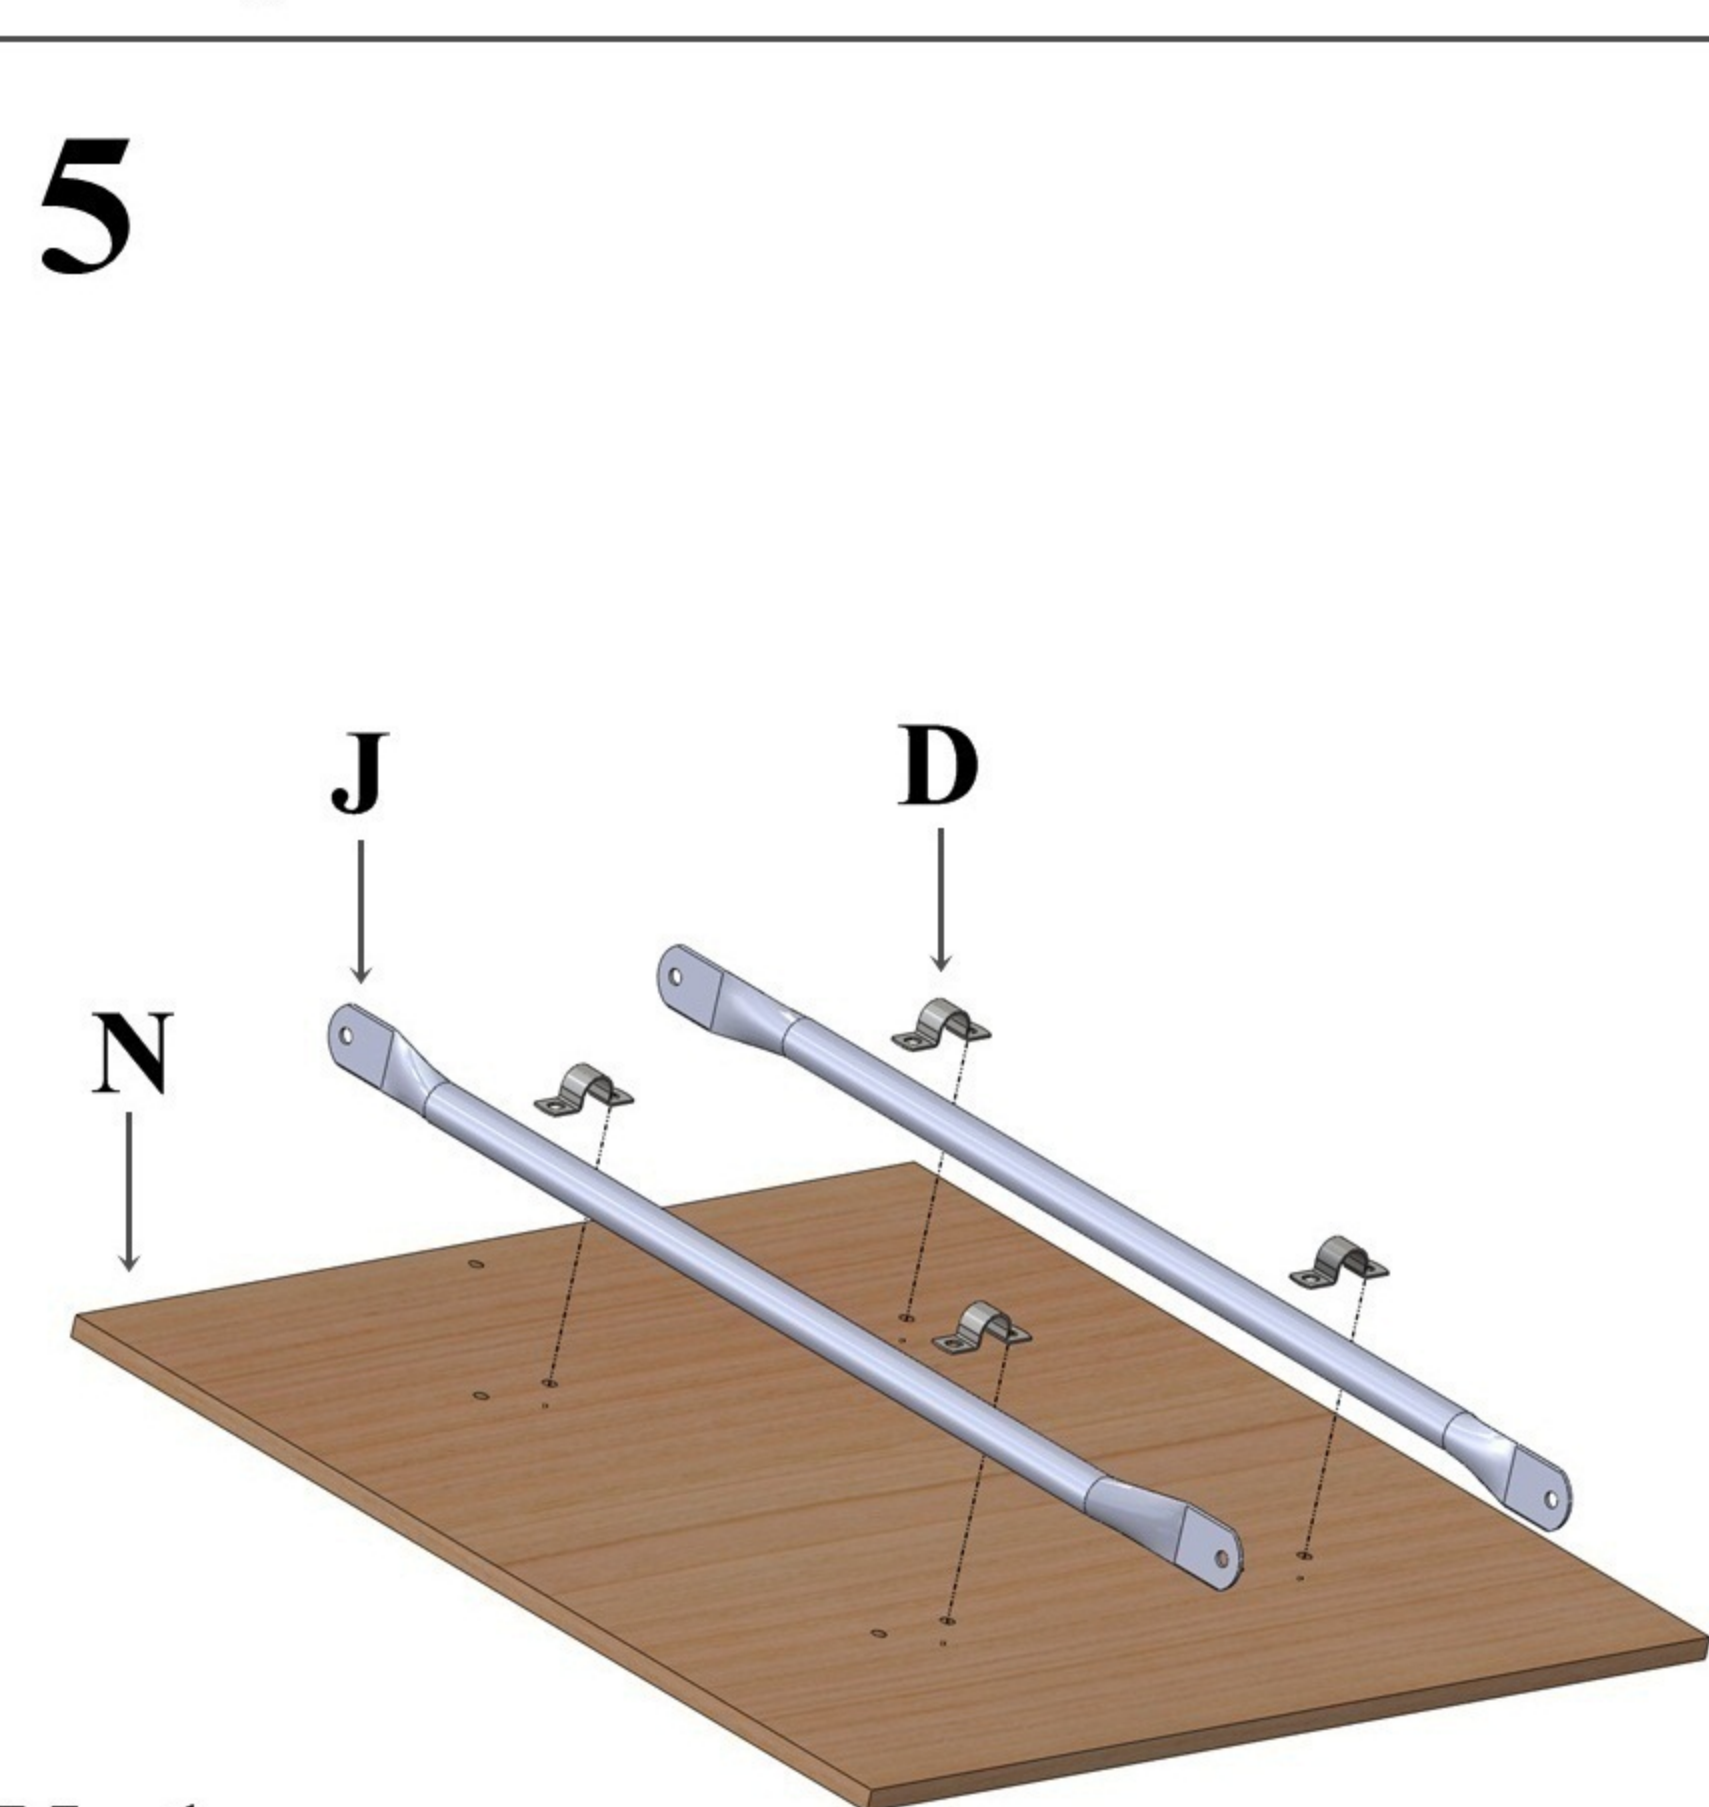

N: 1 pc
J: 2 pcs
D: 4 pcs
A: 8 pcs

*Comes Pre-assembled

6

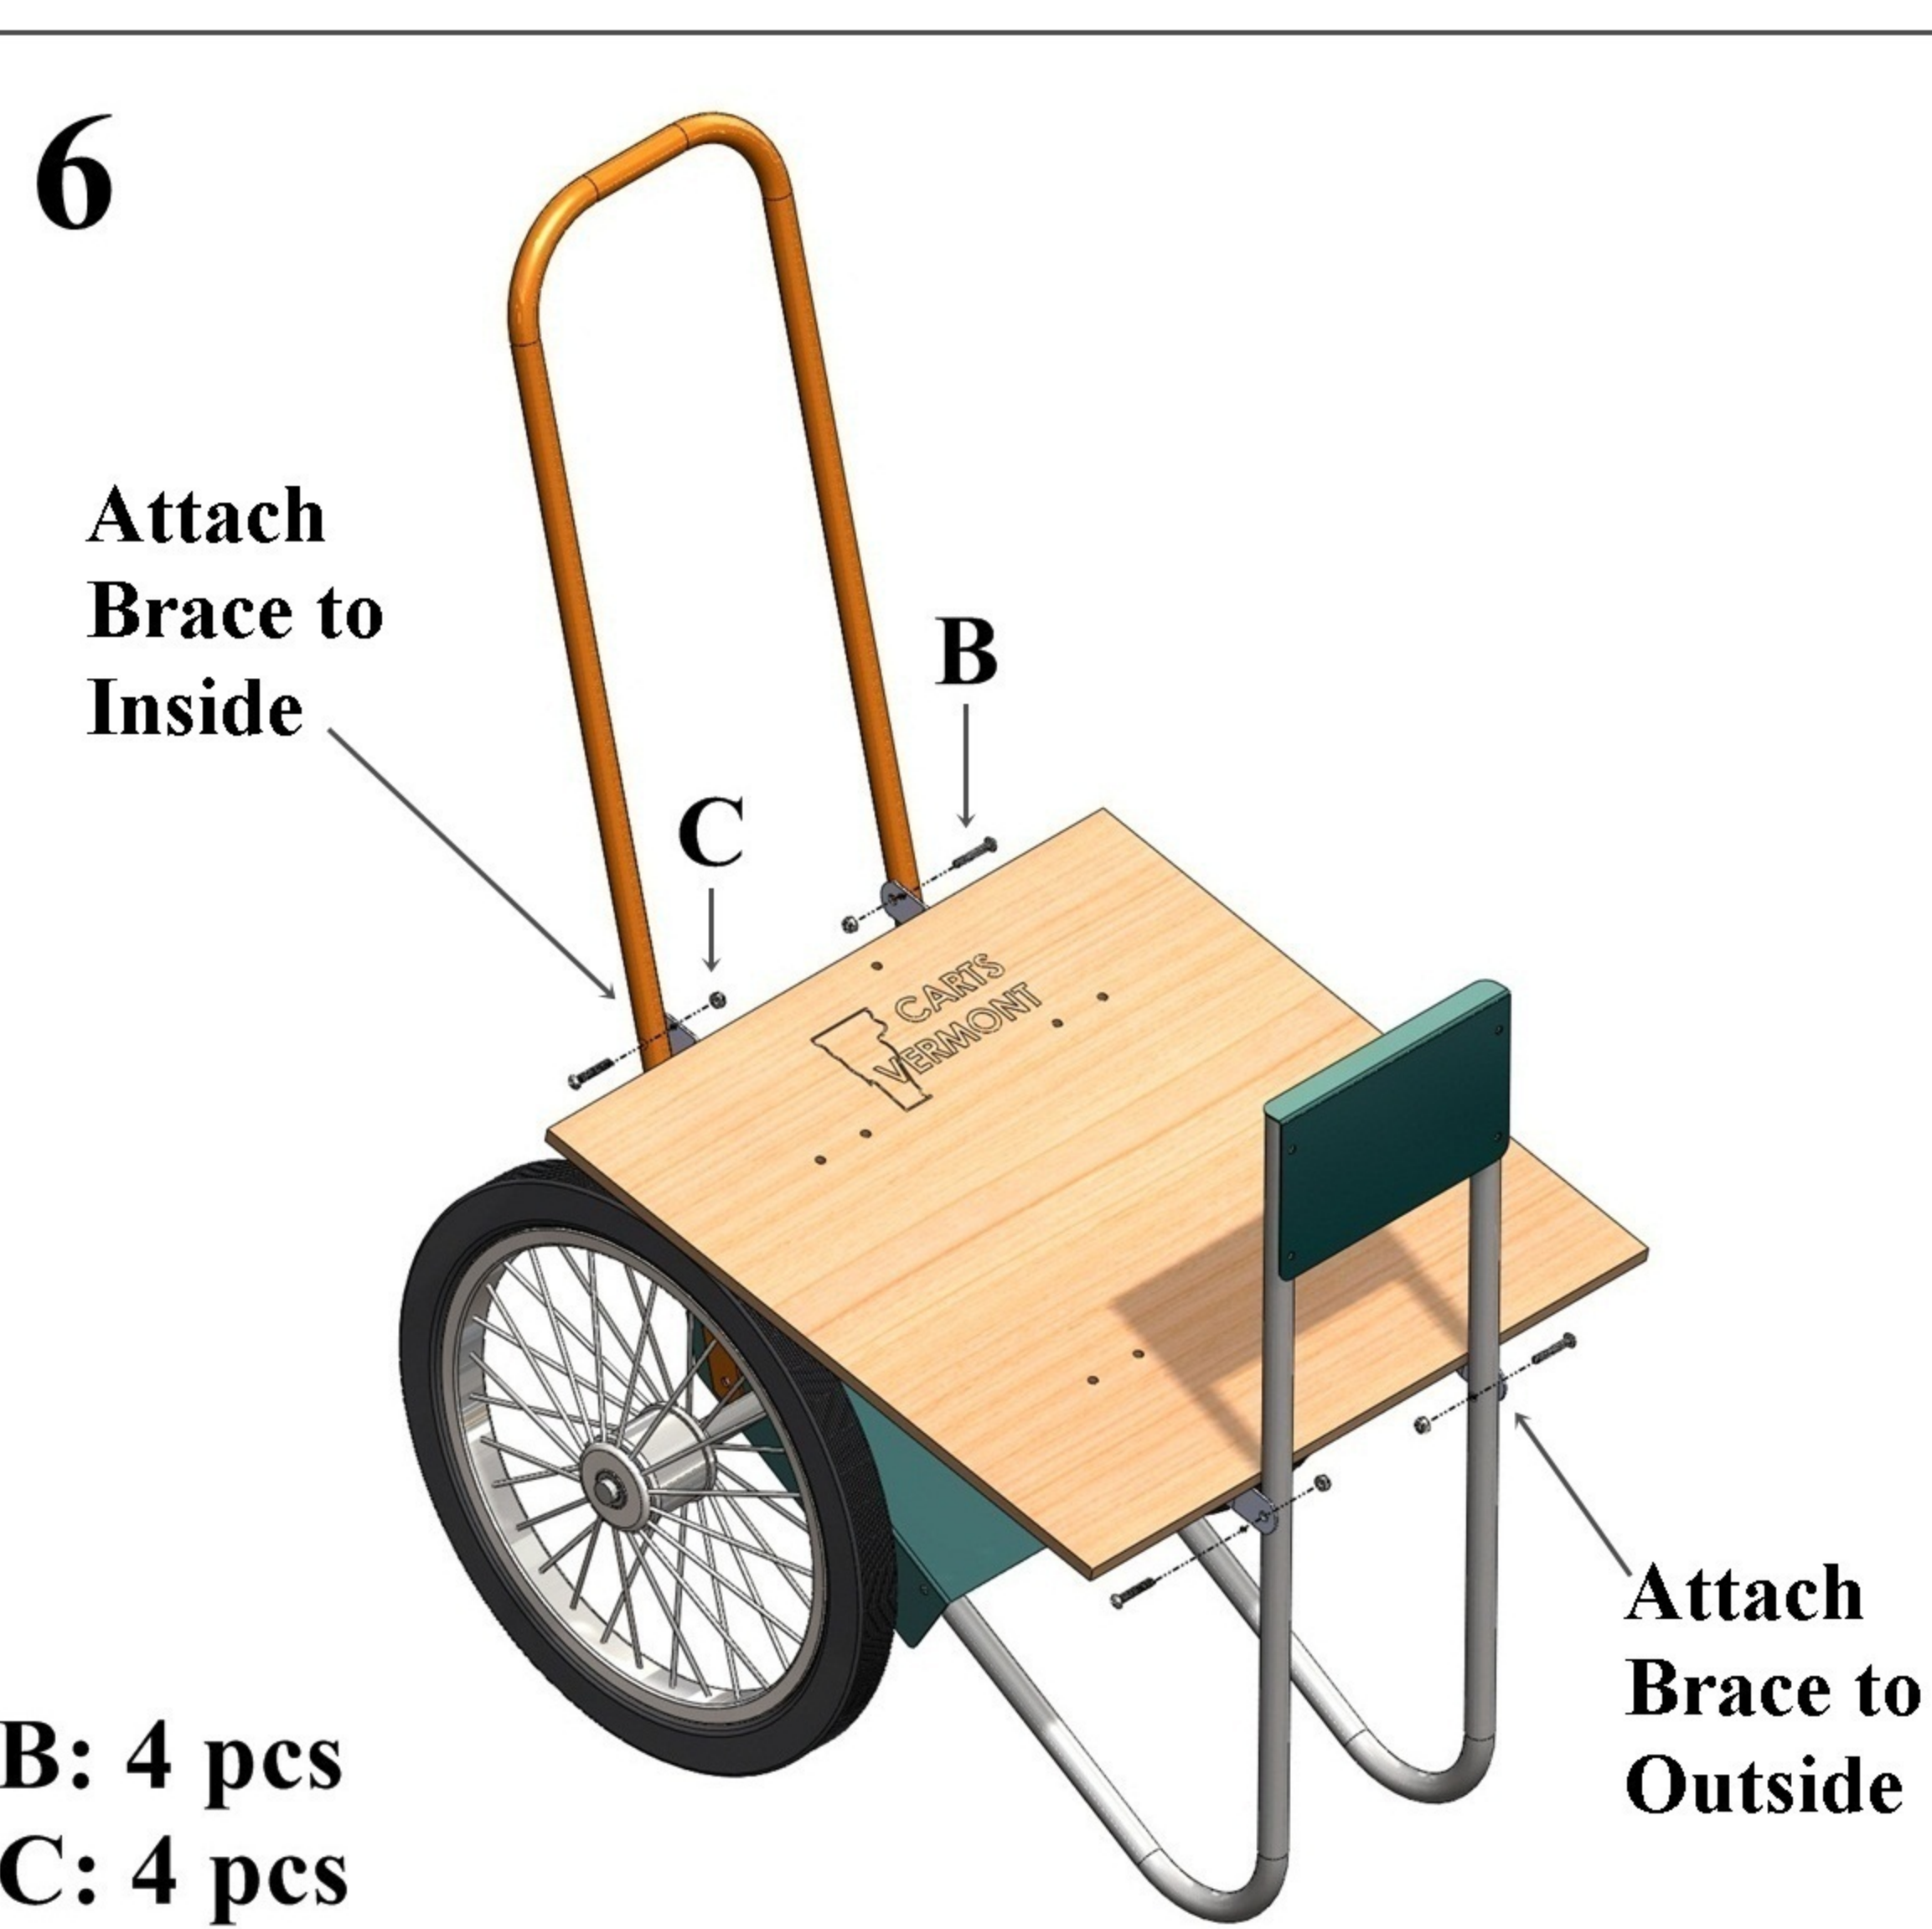

B: 4 pcs
C: 4 pcs

Written Assembly Instructions:

*Note, leave all screws and assembly nuts loose until final assembly.

- Attach the front panel (H) to the Leg stands (K) using (4) 1-1/2" bolts (B).

Attach bolts to lock nuts (C), (lock nuts on inside).

- Attach leg stand assembly to the axle frame (G) using (2) 1-1/2" bolts (B)

Attach bolts to lock nuts (C), (lock nuts on inside).

- Attach the handle (L) to the axel frame using (2) 5/8" bolts (A) and (2) 1-1/2" bolts (B), making sure the bolts go through the holes in the leg stands.

Attach bolts to lock nuts (C), (lock nuts on inside).

- Slide the axel (I) through both sides of the axle frame.

Slide wheel spacers (E) on both ends of the axle.

Slide wheels (M) onto both ends of axle.

Secure wheels onto the axel with the 2 cotter pins (F).

- Pellet Pallet Assembly

Attach the two cross braces (J) to the bottom side of the pallet using the (4) brackets (D) and (8) 5/8" bolts (A).

*Position the cross braces so the flat sides are facing inwards towards the each other, leave bolts loose until final assembly.

- Attach the pellet pallet assembly onto the main cart body using (4) 1-1/2" bolts (B).

Attach bolts to lock nuts (C), (lock nuts on inside).

- Tighten all screws and assembly nuts.